


# ARRadio

## Quick Start Guide >>>

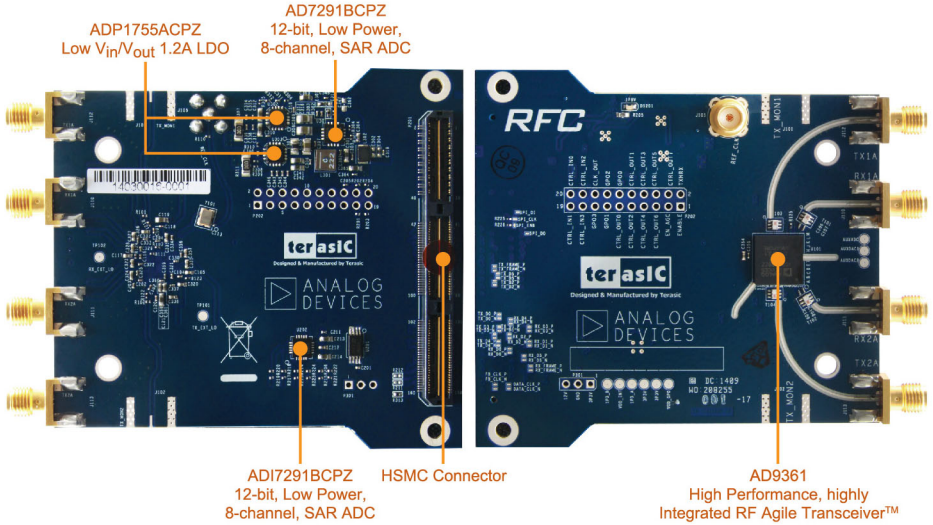

### 1 What's in the Box?

- 1  ARRRadio Board
- 2  ARRRadio Quick Start Guide
- 3  USB OTG Cable
- 4  8GB MicroSD Card with Card Reader (Pre-programmed)



If you encounter any problem, please contact us below

✉ Email: [support@terasic.com](mailto:support@terasic.com)

☎ Tel: +886-3-575-0880

## 2 Resources

▲ For the System CD and Linux image files of this package, please download from the link below:

 <http://cd-arradio.terasic.com>



<http://cd-arradio.terasic.com>

## 3 Power On Test

SoCKit is required for ARRRadio board testing.

- 1 Mount the ARRRadio board to HSMC connector on SoCKit and fasten the screws.
- 2 Make sure MSEL[4:0]=0000 on SoCKit.
- 3 Insert the MicroSD card that comes with the ARRRadio kit into SoCKit.
- 4 Connect a VGA monitor to the VGA connector on SoCKit.
- 5 Connect the USB OTG cable that comes with the ARRRadio kit into the USB OTG port on SoCKit.
- 6 Connect a USB mouse to the OTG cable.
- 7 Plug in 12V DC power to SoCKit.
- 8 Power on SoCKit, and it will take about 4 minutes to boot the Linux system.
- 9 After the system boot is completed, ADI IIO Oscilloscope software will appear on the Linux Desktop.
- 10 Use the mouse to navigate/operate the software.

