

Wzzard™ Mesh Gen2 Starter Bundles

Refrigeration Monitoring Kit

SETUP MANUAL



B+B SMARTWORX

Powered by

ADVANTECH

Advantech B+B SmartWorx - Americas

707 Dayton Road
Ottawa, IL 61350 USA
Phone 1 (815) 433-5100
Fax (815) 433-5105

Advantech B+B SmartWorx - European Headquarters

Westlink Commercial Park
Oranmore, Co. Galway, Ireland
Phone +353 91-792444
Fax +353 91-792445

www.advantech-bb.com
support@advantech-bb.com

CONTENTS

REFRIGERATION MONITORING STARTER KIT.....4

WZZARD MESH NETWORK SETUP.....4

DOWNLOADING REFRIGERATION MONITOR Node-RED™ FLOW TO THE GATEWAY.....5

POINT THE MQTT DATA TO THE INTERNAL MQTT BROKER12

WAKE UP WZZARD™ MESH EDGE NODE14

ACCESS Node-RED™ UI IN THE GATEWAY15

NETWORK HEALTH PAGE.....16

ATTACHING THE SENSORS ON THE INTELLIGENT EDGE NODES17

MOUNTING YOUR SENSORS18

ACCESSING THE DASHBOARD19

SETTING UP AN E-MAIL ACCOUNT20

SETTING UP YOUR DROPBOX FOR LOGGING.....22

APPENDIX A. CARRIER TEXT MESSAGING URL ADDRESSES25

Node-RED™ SOFTWARE LICENSE27

B+B SMARTWORX TECHNICAL SUPPORT28

REFRIGERATION MONITORING STARTER KIT**Kit Model BB-WSK-REF-2**

The Wzzard™ Mesh Refrigeration Monitoring Application Kit provides a non-intrusive, easily installed solution for monitoring internal and external temperature, door open/closed and current draw on refrigeration equipment without disrupting your existing facility operations. Email or text message alerts can be sent when user-configured high or low limits are exceeded in critical applications.

Installation costs are kept low using the Wzzard Mesh Wireless Sensing platform. The platform creates a self-forming, self-healing wireless mesh network that eliminates the need for wires and requires no special skills to install. Each Wzzard sensor node is powered by long life batteries.

Using Node-RED™, a simple, browser based application pre-installed on the gateway, you can monitor your cooler or freezer performance from any web browser on your network.

The contents of the kit include:

Qty 1	BB-WCD1H2102H	Commercial Temperature/Humidity Wzzard Mesh Node
Qty 2	BB-JC10F50-V	50A Clamp-on Current Sensor
Qty 1	BB-WCHCBL	Thermistor/Breakout Cable
Qty 1	BB-WCHMS	Door Sensor Cable
Qty 1	SmartSwarm 342™	Ethernet Wzzard Mesh Gateway

WZZARD MESH NETWORK SETUP

The Wzzard Mesh Node and Gateway in this kit are preconfigured. If this is the only Wzzard Mesh device in your vicinity, it will need no further configuration. If other Wzzard Mesh gateways or nodes are nearby and unclaimed, you will need to claim the gateway and the node. See respective node and gateway manuals for instructions.


DOWNLOADING REFRIGERATION MONITOR NODE-RED™ FLOW TO THE GATEWAY

NOTE: The gateway must be in operational and online state in order to add the HVAC application (ie Eth1 must be plugged in).

1. Follow the instructions in the Gateway's Quick Start Guide to claim your gateway.
2. Select **View Devices** from the dropdown menu on the SmartWorx™ Hub home screen:



3. Select your device from the list of available devices:

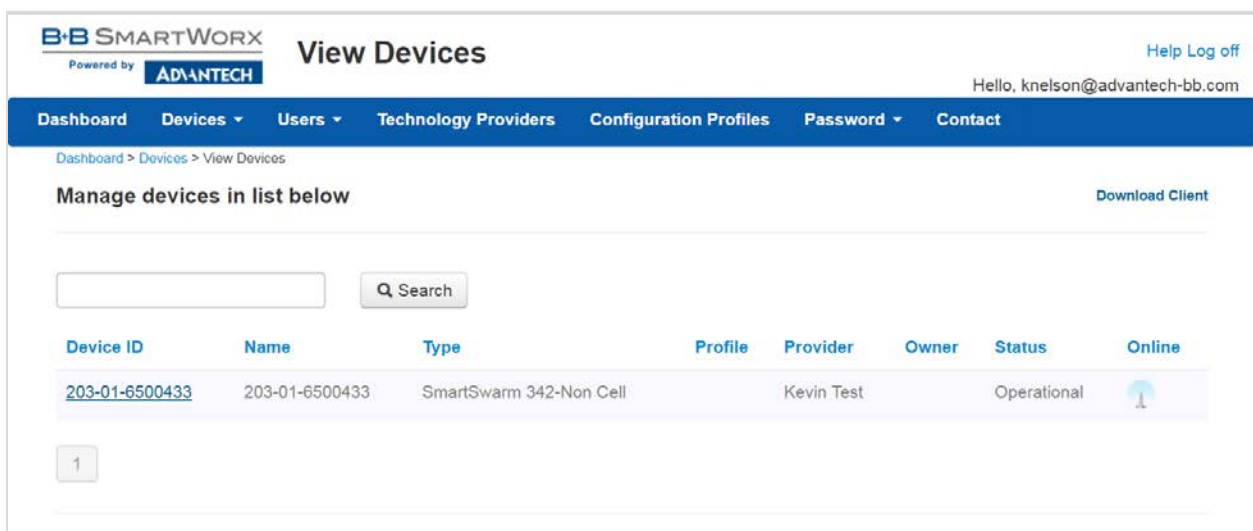

4. Select **Add/Upgrade Apps** tab.

B+B SMARTWORX Manage Device Help Log off
Powered by **ADVANTECH** Hello, knelson@advantech-bb.com

Dashboard Devices Users Technology Providers Configuration Profiles Password Contact

Dashboard > Devices > Manage Device

Device ID: 203-01-6500433
Name: 203-01-6500433
Status: Operational
Firmware: 2.2.0 **Push**
Device Type: SG30000525-42
MAC Address: 00:0A:14:86:77:C6
Online:
Settings: Select...

Save Cancel History **Add/Upgrade Apps** Geo Location **Wzzard Mesh**

Manage Apps

Remove Selected

Name	Tag	Type	Version	Help	Added
<input type="checkbox"/> Wzzard Mesh	Wzzard Mesh	Application	1.0.6		29/03/2018 17:55:17
<input type="checkbox"/> Components-342	Components-342	Component	1.4.0		29/03/2018 17:55:17

1

5. Check the box next to **REF**. A list of components to be updated will appear.

B+B SMARTWORX
Powered by ADVANTECH

Select Applications

Help Log off
Hello, knelson@advantech-bb.com

Dashboard Devices Users Technology Providers Configuration Profiles Password Contact


Dashboard > Devices > Manage Device > Select Applications

Add/Upgrade Selected Cancel

Name	Tag	Type	Version	
<input type="checkbox"/> DustCLI	<input type="text"/>	Application	1.0.1	
<input type="checkbox"/> NodeRED	<input type="text"/>	Application	1.0.10	
<input type="checkbox"/> RSMessagesBroker	<input type="text"/>	Application	1.0.4	
<input type="checkbox"/> Wzzard Mesh	<input type="text"/>	Application	1.0.6	
<input type="checkbox"/> Components-342	<input type="text"/>	Component	1.4.0	
<input type="checkbox"/> NodeJS	<input type="text"/>	Component	6.2.1	
<input type="checkbox"/> HVAC	<input type="text"/>	Package	1.0.0	i
<input type="checkbox"/> NRG	<input type="text"/>	Package	1.0.0	i
<input checked="" type="checkbox"/> REF	<input type="text"/>	Package	1.0.0	i

1

6. Click **OK** to accept the download.

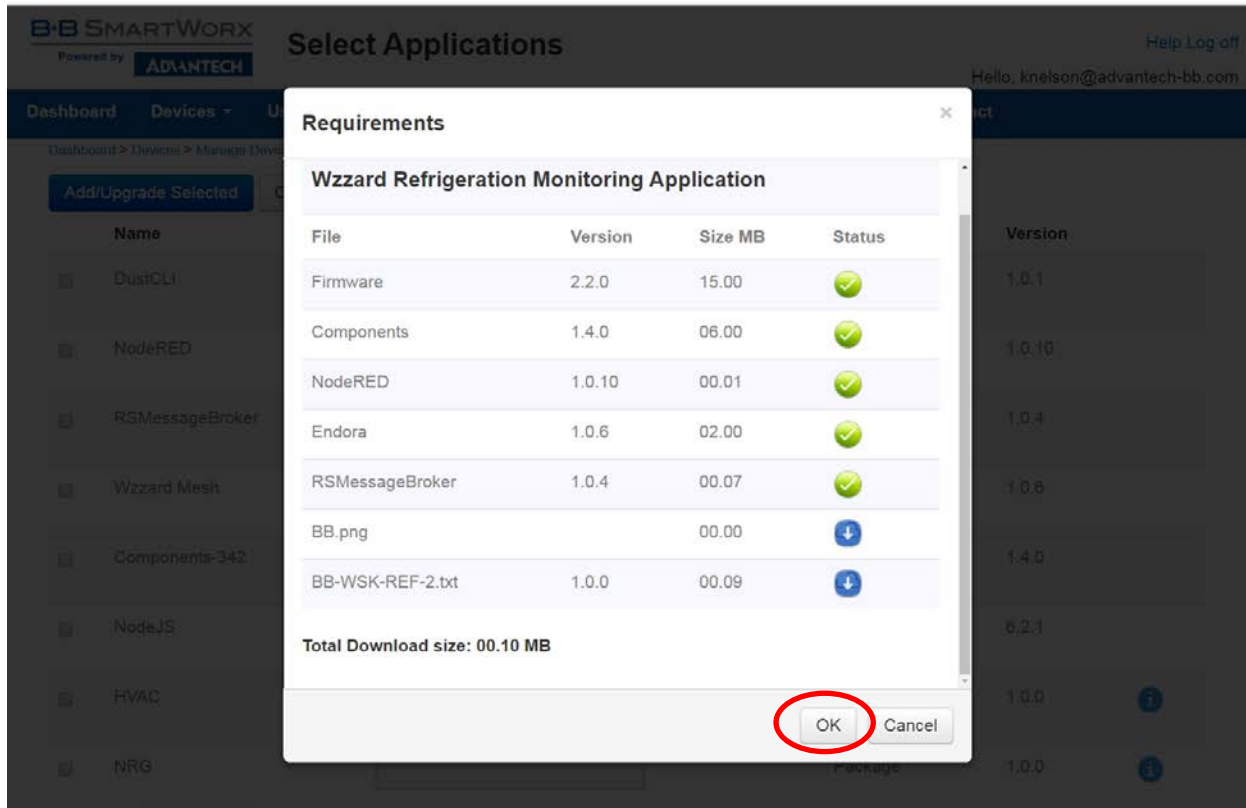

7. Click **Add/Upgrade Selected** to start the download.

B+B SMARTWORX **Select Applications** Help Log off
Powered by **ADVANTECH** Hello, knelson@advantech-bb.com

[Dashboard](#) [Devices](#) [Users](#) [Technology Providers](#) [Configuration Profiles](#) [Password](#) [Contact](#)

Dashboard > Devices > Manage Device > Select Applications

Add/Upgrade Selected Cancel

Name	Tag	Type	Version
<input type="checkbox"/> DustCLI	<input type="text"/>	Application	1.0.1
<input type="checkbox"/> NodeRED	<input type="text"/>	Application	1.0.10
<input type="checkbox"/> RSMessagesBroker	<input type="text"/>	Application	1.0.4
<input type="checkbox"/> Wzzard Mesh	<input type="text"/>	Application	1.0.6
<input type="checkbox"/> Components-342	<input type="text"/>	Component	1.4.0
<input type="checkbox"/> NodeJS	<input type="text"/>	Component	6.2.1
<input type="checkbox"/> HVAC	<input type="text"/>	Package	1.0.0 i
<input type="checkbox"/> NRG	<input type="text"/>	Package	1.0.0 i
<input checked="" type="checkbox"/> REF	<input type="text"/>	Package	1.0.0 i

1

- 8. The download could take several minutes. To monitor the progress, select **History** from the **Manage Device** screen.

The screenshot shows the 'Manage Device' page in the B+B SMARTWORX web interface. The page includes a navigation menu with options like Dashboard, Devices, Users, Technology Providers, Configuration Profiles, Password, and Contact. The main content area displays device information for a device with ID 203-01-6500433. Fields include Name (203-01-6500433), Status (Operational), Firmware (2.2.0), Device Type (SG30000525-42), MAC Address (00:0A:14:86:77:C6), and Online status (Online). A 'Settings' dropdown is set to 'Select...'. At the bottom, there are buttons for 'Save', 'Cancel', 'History' (circled in red), 'Add/Upgrade Apps', 'Geo Location', and 'Wzzard Mesh'. An image of the SMARTSWARM 300 Series device is shown on the right.

9. As each component is updated, it will be indicated with a ✓ check mark:

NOTE: “AddNode” commands will show an **X** if they have already been installed.

History

[Help](#) [Log off](#)

Hello, knelson@advantech-bb.com

Dashboard
Devices ▾
Users ▾
Technology Providers
Configuration Profiles
Password ▾
Contact

Dashboard > Devices > Manage Device > History

Device Name 203-01-6500433

Device ID 203-01-6500433

Registered On 29/03/2018 17:45:58

Last Check In 19/04/2018 16:40:47

Show entries

Command	Created by	Name	Queued	Completed	Success	Response
UploadConfig	203-01-6500433	2.2.0	19/04/2018 16:38:42	19/04/2018 16:38:42	✓	{"config":{"swm_firewa...
UploadConfig	203-01-6500433	2.2.0	19/04/2018 16:38:31	19/04/2018 16:38:31	✓	{"config":{"swm_firewa...
AddFlow	knelson@advantech-bb.com	REF	19/04/2018 16:38:26	4/19/2018 4:42:23 PM	✓	Success, ["cfcc09de.5a9a48"]
GetFlow	knelson@advantech-bb.com	REF	19/04/2018 16:38:26	19/04/2018 16:38:33	✓	
InstallNewApp	knelson@advantech-bb.com	REF	19/04/2018 16:38:26	19/04/2018 16:38:26	✓	Completed
GetBinaryFile	knelson@advantech-bb.com		19/04/2018 16:38:26	19/04/2018 16:38:31	✓	
DownloadSettings	knelson@advantech-bb.com	swm_firewall	19/04/2018 16:38:26	19/04/2018 16:38:31	✓	
DownloadSettings	knelson@advantech-bb.com	swm_firewall	19/04/2018 16:38:26	19/04/2018 16:38:30	✓	
GetVersions	203-01-6500433		18/04/2018 21:27:59	18/04/2018 21:28:05	✓	{"apps": [{"name": "R...
RemoveFlow	knelson@advantech-bb.com	HVAC	18/04/2018 21:23:46	18/04/2018 21:23:52	✓	Success

Showing 1 to 10 of 122 entries

Cancel

← Previous
1
2
3
4
5
Next →

POINT THE MQTT DATA TO THE INTERNAL MQTT BROKER

- 1. From the **Manage Device** screen, click the **Wzzard™ Mesh** application.

Manage Device

Dashboard > Devices > Manage Device

Device ID: 203-01-6500433

Name: 203-01-6500433

Status: Operational

Firmware: 2.2.0 **Push**

Device Type: SG30000525-42

MAC Address: 00:0A:14:86:77:C6

Online:

Settings: Select...

Save **Cancel** **History** **Add/Upgrade Apps** **Geo Location** **Wzzard Mesh**

Manage Apps

Remove Selected

Name	Tag	Type	Version	Help	Added
<input type="checkbox"/> NodeJS	NodeJS	Component	6.2.1		18/04/2018 14:51:22
<input type="checkbox"/> Wzzard Mesh	Wzzard Mesh	Application	1.0.6		29/03/2018 17:55:17
<input type="checkbox"/> NodeRED	NodeRED	Application	1.0.10		17/04/2018 20:57:46
<input type="checkbox"/> RSMMessageBroker	RSMMessageBroker	Application	1.0.4		17/04/2018 20:57:46
<input type="checkbox"/> Components-342	Components-342	Component	1.4.0		29/03/2018 17:55:17

2. Fill in the **Application Settings** screen as shown and click the **Apply Changes** button:

MQTT

Application Settings

Device ID 203-01-6500433

Application Name Wzzard Mesh

Version 1.0.6

Tag

* Required Field

MQTT

Host:

Port:

Username:

Password:

Client ID: *

Timeout (secs):

Retry Interval (secs):

Keep Alive (secs):

Reliability:

Clean Session:

Enable TLS: ▼

Verify Server Cert:


WAKE UP WZZARD™ MESH EDGE NODE

1. Press and hold the **Config/Status** button for 5 seconds until the Status LED starts blinking.
2. Check LED.
3. After you have awakened the node, the LED will begin to blink. This indicates that the node is attempting to establish a network connection. The LED will cease blinking when a connection is made or after 10 seconds. Press the Config/Status LED for approximately 1 second to view the LED status.

LED Indicator	Status
OFF (after button press)	Node is asleep or dead battery.
Slow Blink (1 per second)	Attempting to establish connection with Wzzard mesh network.
Solid ON	Node is connected to a gateway.
Fast Blink (10 per second)	Firmware update in progress.

ACCESS Node-RED™ UI IN THE GATEWAY

1. Attach the antenna to the Wzzard™ Mesh antenna port on the gateway.
2. Attach the Ethernet cable to the ETH0 port on the gateway and the other end to your PC. You will use an Ethernet connection to configure the gateway and to communicate with it.
3. Attach the supplied power supply and plug it in.
4. Open a browser on your computer and open the Node-RED Configuration page. The default address is: **192.168.1.1:1880/ui**. (Chrome or Firefox recommended.)

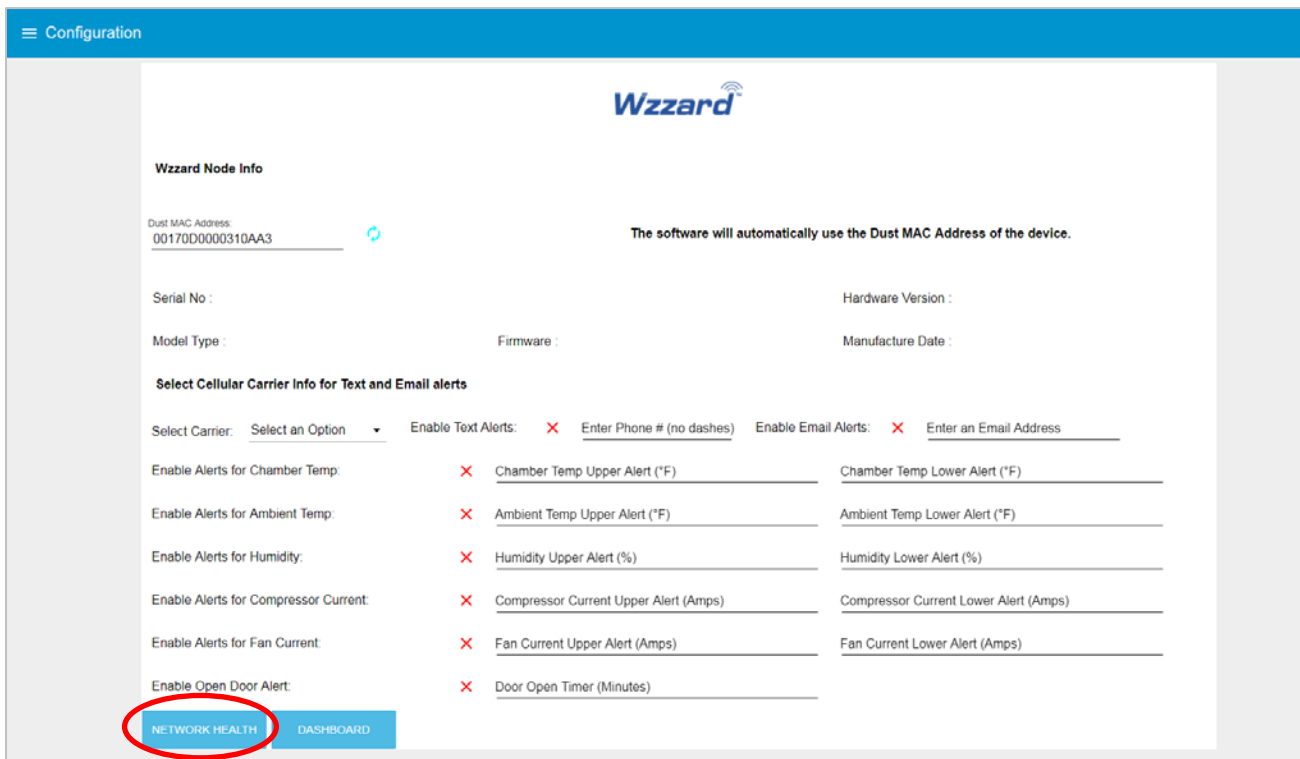

5. The Wzzard Node information values will populate when the node joins the network.
6. You can set up a phone number to receive text messages and/or an e-mail address for receiving alerts on this page. For text messaging, you will need to select the cell carrier of the receiving phone. If the carrier is not on the list, select custom, and add the URL of the carrier to the phone number (ie: 1-123-2345@txt.abcphone.com). See Appendix A for carrier text addresses. If your carrier is not listed, contact your carrier for the address of their SMS gateway.
7. You can enable or disable alerts as well as setting the trigger values on this page also.

NETWORK HEALTH PAGE


1. Click the **Network Health** button on the lower left corner of the **Configuration** page (see previous screen). The page below appears. This page shows the status of the network.



ATTACHING THE SENSORS ON THE INTELLIGENT EDGE NODES

The Wzzard™ Mesh Refrigeration Monitoring Kit comes with built-in sensors for ambient temperature and humidity, along with two AC current sensors, a door switch, and a breakout cable with 10K thermistor.

1. Plug the Breakout/Thermistor Cable into the Molex connector on the bottom of the Wzzard Mesh node.

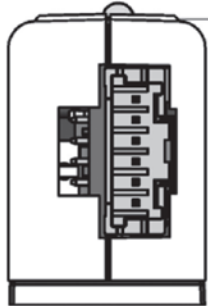


2. Plug the door sensor into the 2-pin connector on the breakout cable.
3. Connect the sensors for compressor and fan current to the bare wires on the breakout cable.

Sensor	Breakout Cable	Connection
Compressor Current	Sensor (+) to Stripped & Tinned Cable	AIN1 RED
	Sensor (-) to Stripped & Tinned Cable	AIN1 BLACK
Fan Current	Sensor (+) to Stripped & Tinned Cable	AIN2 YELLOW
	Sensor (-) to Stripped & Tinned Cable	AIN2 BLACK

Current Sensors


1. Open the wire protector clamp by pushing it away from the sensor body.
2. Attach your wires.
3. Close the wire protector clamp.

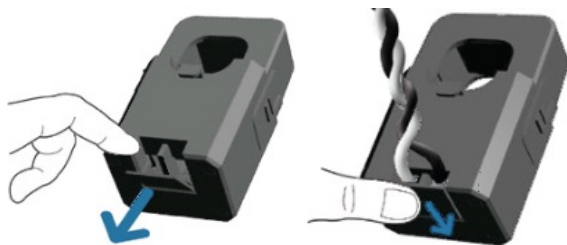

MOUNTING YOUR SENSORS**Current Sensors**

The sensor can be mounted in any position.


1. Open the clamp release by pushing it away from the sensor body. Run the wire you are monitoring through the opening in the sensor.

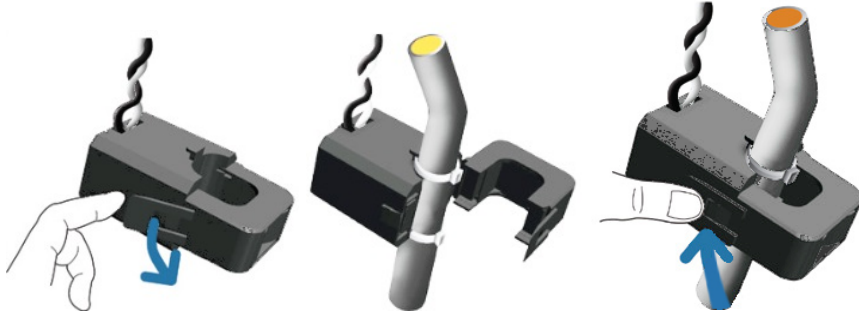

2. Close the sensor firmly around your wire and ensure that the clamp release has snapped back into place.


ACCESSING THE DASHBOARD

1. Open a browser on your computer and open the Node-RED™ Configuration page. The default address is: **192.168.1.1:1880/ui**
2. Click on the **Dashboard** button on the lower left corner of the configuration page.
3. The dashboard should look like the following screen.
4. You can switch to the **Configuration** page or **Network Health** page by clicking on their respective buttons on the lower left.

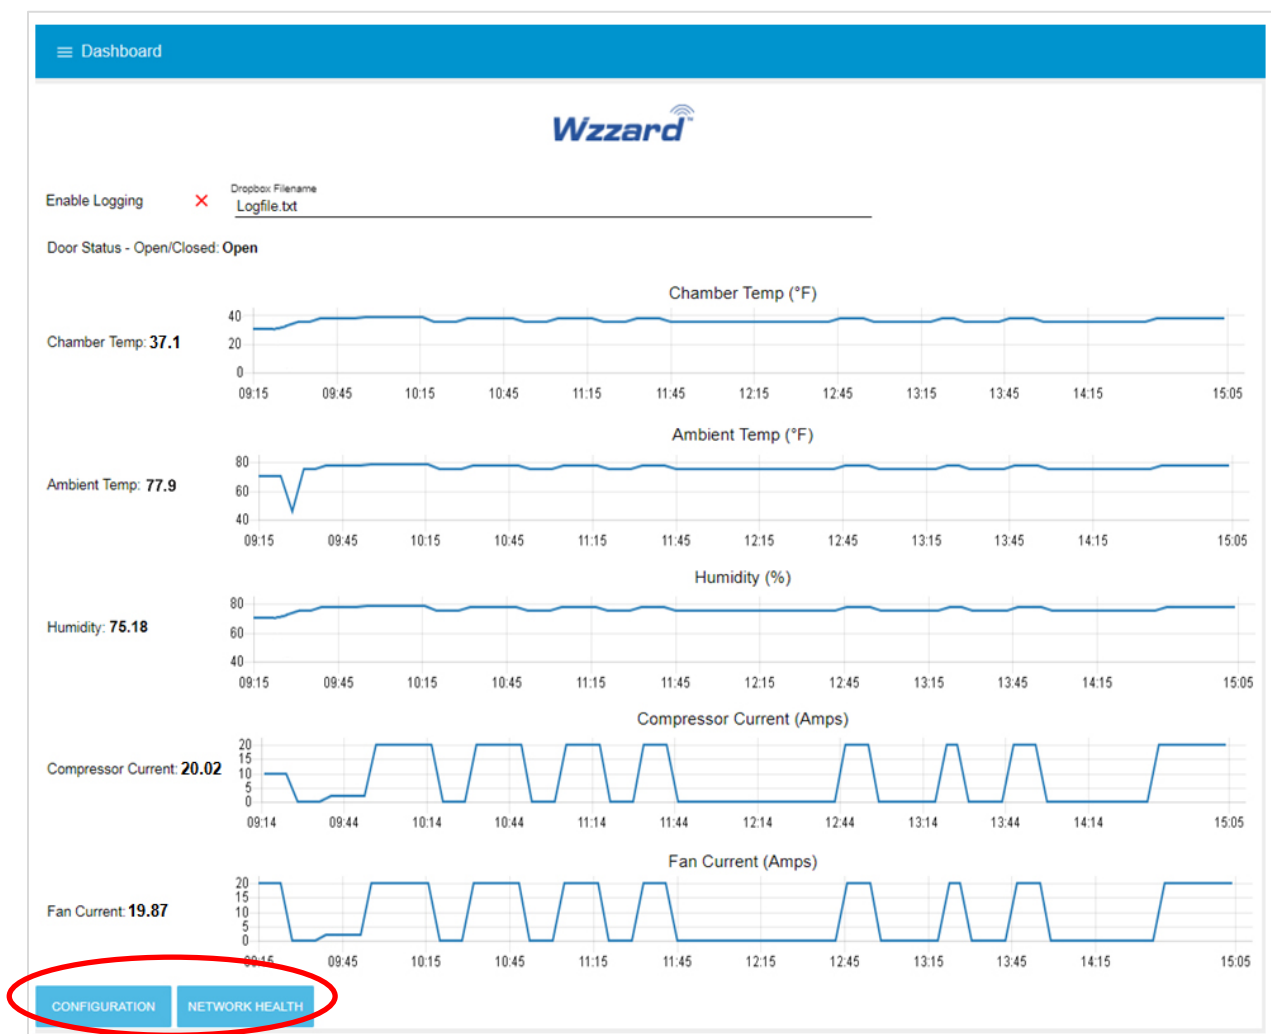


SETTING UP AN E-MAIL ACCOUNT

- 1. From your browser, open the Node-RED™ flow at **192.168.1.1:1880**.

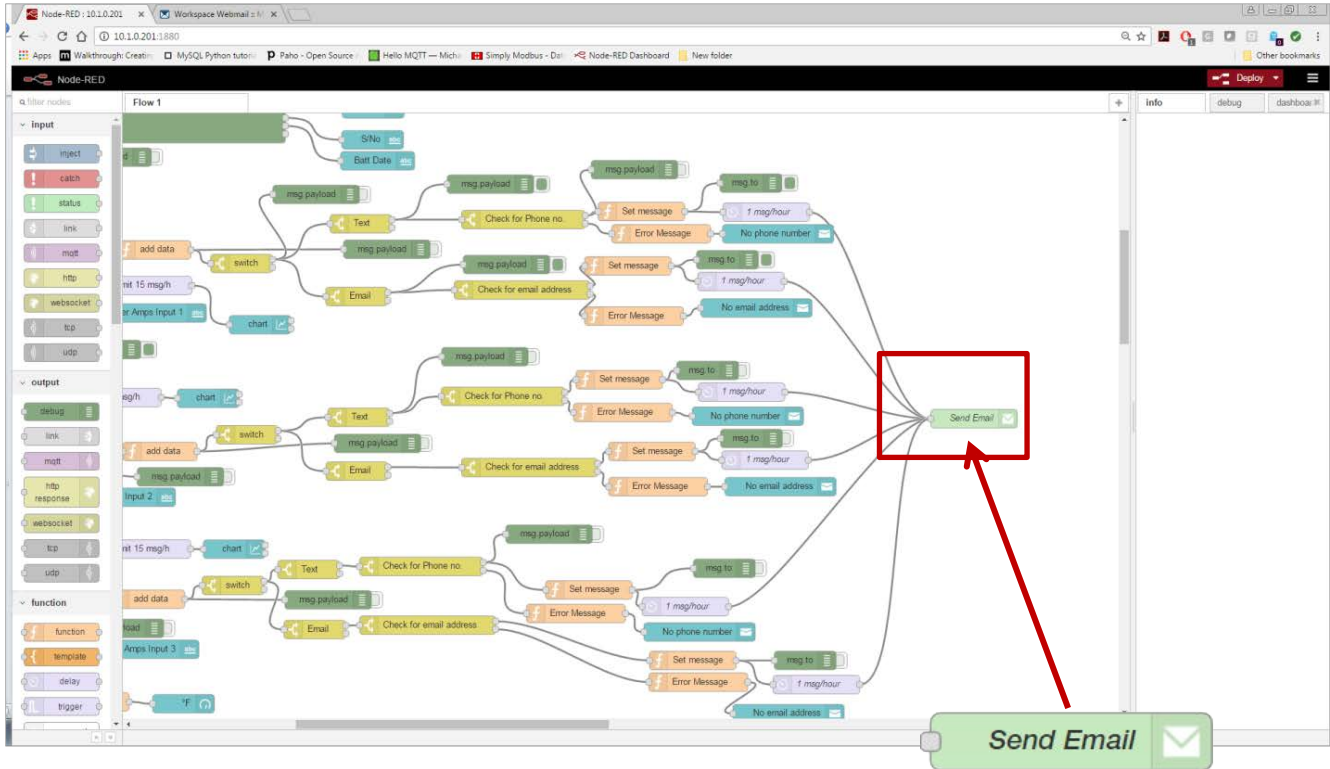


- 2. Locate **Energy Page**, then scroll right and locate the green **Send Email** node; double click on it.

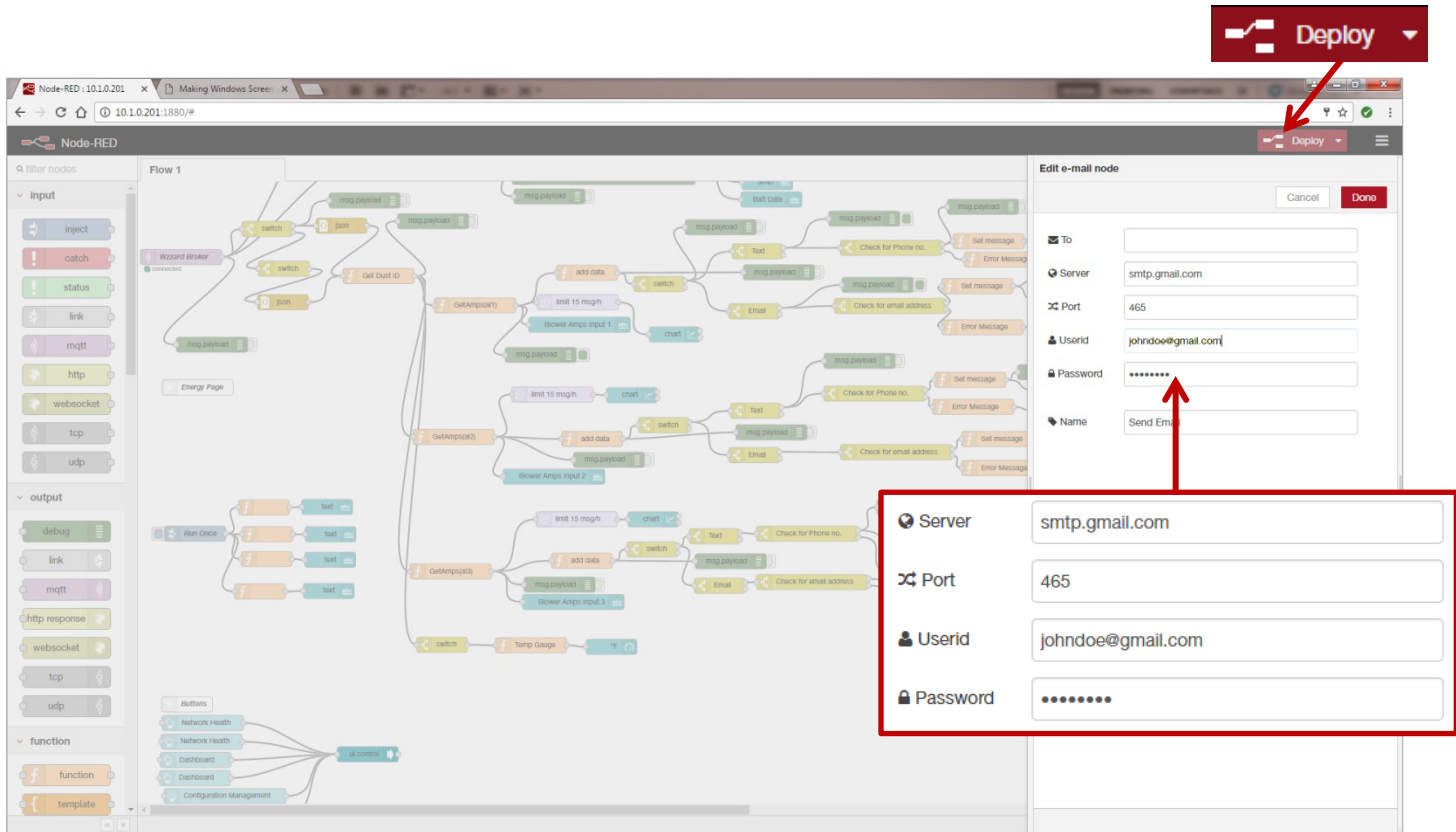

3. Enter your **UserID** and **Password** for your e-mail server in the appropriate boxes. (Leave the “To” field blank.)

NOTE: If you are using a G-Mail account, you will need to enable “Less Secure Apps” in the Google security settings. See below.

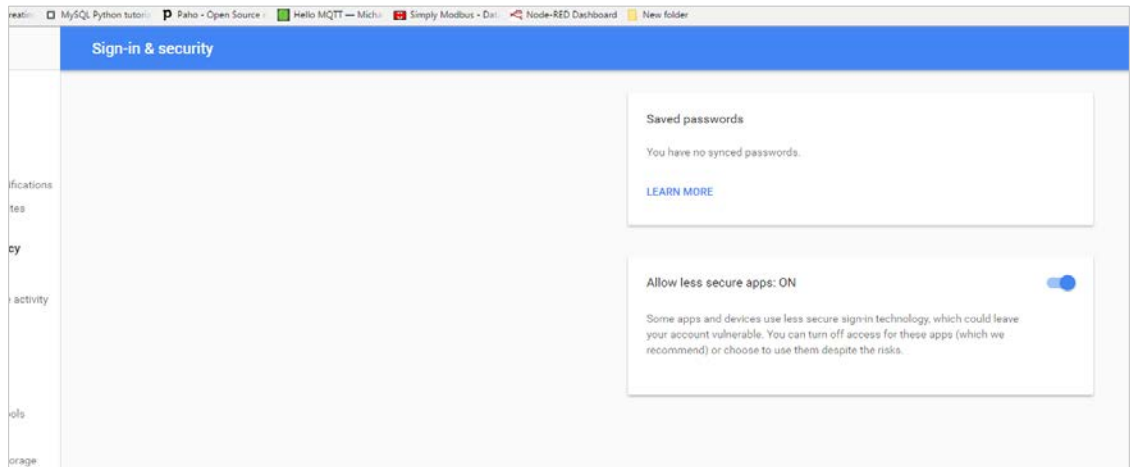


4. Click **Done**. Then click the **Deploy** button in the upper right corner of the page.

Note: Once you deploy the edited flow, you will have to re-enter any alert settings on the configuration screen of the dashboard.


SETTING UP YOUR DROPBOX FOR LOGGING

1. Log in to your Dropbox account or sign up for a new one.
2. Once signed up or logged in:
 - Go to <https://www.dropbox.com/developers>
 - Click **Create Your App** box in the center of the screen.
 - Select **Dropbox API App**.
 - Choose an appropriate answer as to whether your node should be limited to its own folder or given full access. (TIP: This can be changed later, so select **Yes** to restrict the application while testing might be a good idea.)
 - Choose an app name.
 - Click **Create App**.


The subsequent app page will contain the App Key. Save this string so you can enter it into the application later.
3. From your browser, open the Node-RED™ flow at **192.168.1.1:1880**.

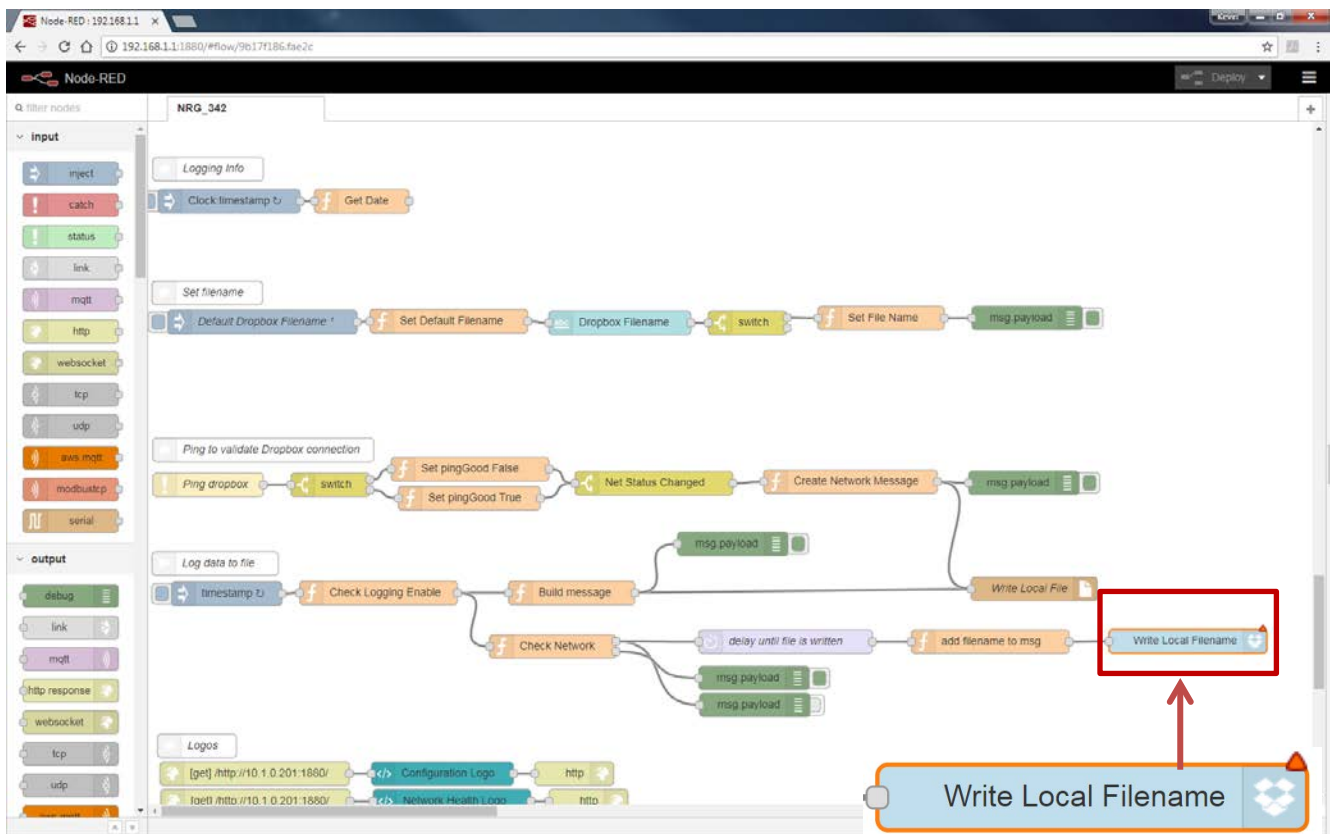

4. Locate **Log data to file**, then scroll right and locate the blue **Write Local File** node; double click on it.

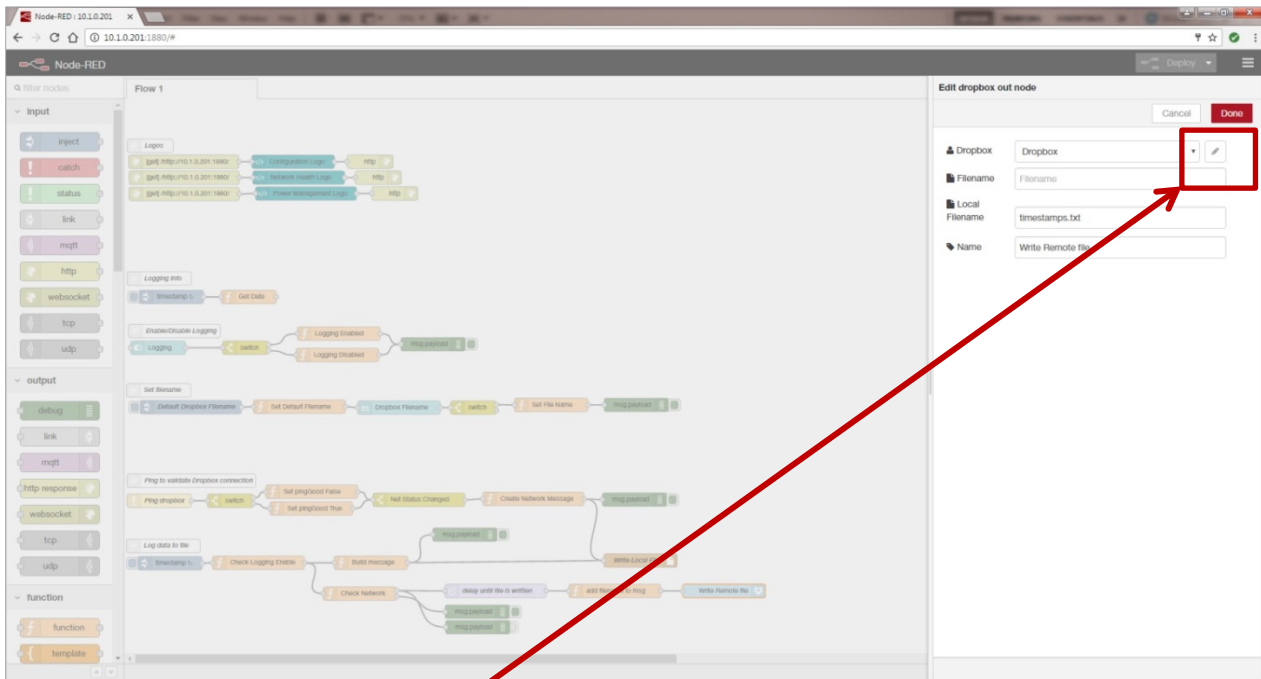

5. Then click on the **pencil icon** next to the Dropbox text window.

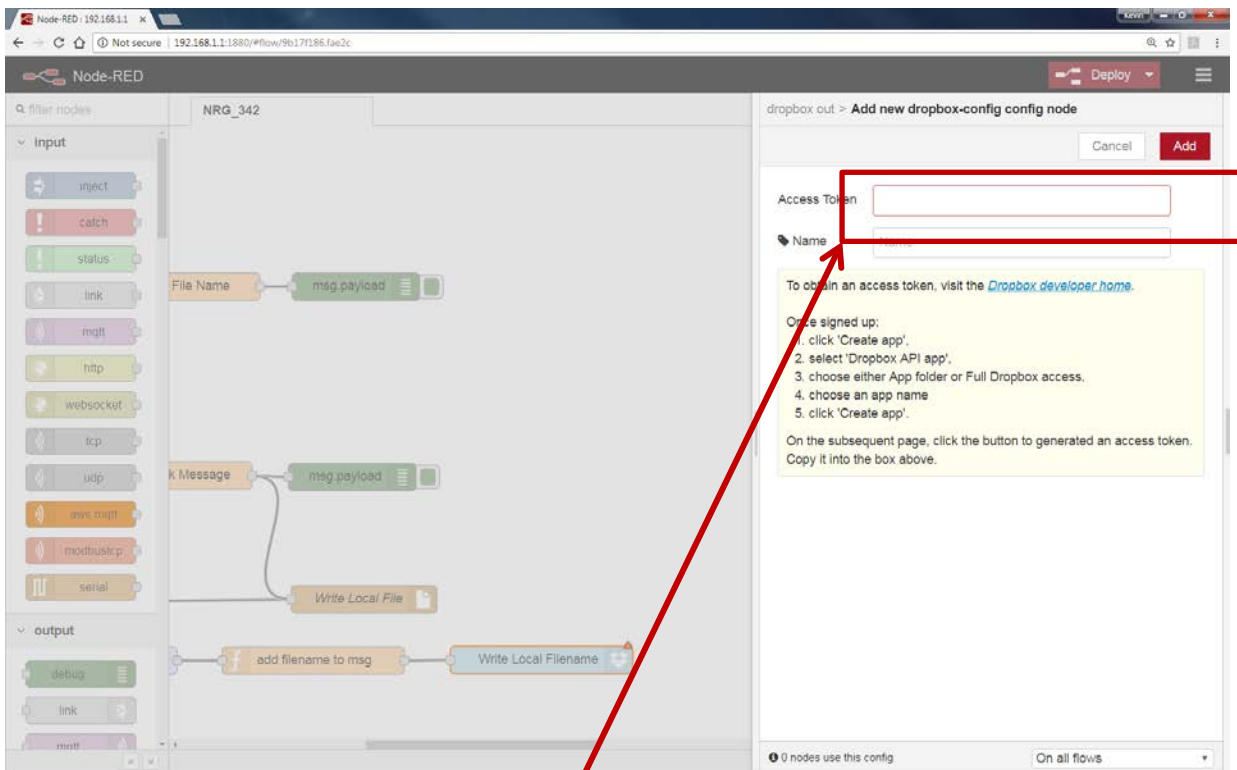

6. Fill in the **Access Token** that you got from Dropbox.(See yellow box for more information.)

7. Click Update; then **Done** again to close both windows.
8. Click the **Deploy** button in the upper right corner of the page.

NOTE: Once you deploy the edited flow, you will have to re-enter any alert settings on the Configuration screen of the Dashboard.

9. Enable logging on the dashboard web page.

APPENDIX A. CARRIER TEXT MESSAGING URL ADDRESSES

U.S.A. Carriers	
Alltel	[10-digit phone number]@message.alltel.com Example: 1234567890@message.alltel.com
AT&T (formerly Cingular)	[10-digit phone number]@txt.att.net [10-digit phone number]@cingularme.com Example: 1234567890@txt.att.net
Boost Mobile	[10-digit phone number]@myboostmobile.com Example: 1234567890@myboostmobile.com
Nextel (now Sprint Nextel)	[10-digit telephone number]@messaging.nextel.com Example: 1234567890@messaging.nextel.com
Sprint PCS (now Sprint Nextel)	[10-digit phone number]@messaging.sprintpcs.com Example: 1234567890@messaging.sprintpcs.com
T-Mobile	[10-digit phone number]@tmomail.net Example: 1234567890@tmomail.net
US Cellular	[10-digit phone number]email.uscc.net (SMS) Example: 1234567890@email.uscc.net
Verizon	[10-digit phone number]@vtext.com Example: 1234567890@vtext.com
Virgin Mobile USA	[10-digit phone number]@vmobl.com Example: 1234567890@vmobl.com

International Carriers	Email to SMS Gateway
7-11 Speakout (USA GSM)	number@cingularme.com
Airtel (Karnataka, India)	number@airtelkk.com
Airtel Wireless (Montana, USA)	number@sms.airtelmontana.com
Alaska Communications Systems	number@msg.acsalaska.com
Aql	number@text.aql.com
AT&T Enterprise Paging	number@page.att.net
BigRedGiant Mobile Solutions	number@tachyonsms.co.uk
Bell Mobility & Solo Mobile (Canada)	number@txt.bell.ca
BPL Mobile (Mumbai, India)	number@bplmobile.com
Cellular One (Dobson)	number@mobile.celloneusa.com
Cingular (Postpaid)	number@cingularme.com
Centennial Wireless	number@cwemail.com
Cingular (GoPhone prepaid)	number@cingularme.com (SMS)
Claro (Brasil)	number@clarotorpedo.com.br
Claro (Nicaragua)	number@ideasclaro-ca.com
Comcel	number@comcel.com.co
Cricket	number@sms.mycricket.com (SMS)
CTI	number@sms.ctimovil.com.ar
Emtel (Mauritius)	number@emtelworld.net
Fido (Canada)	number@fido.ca
General Communications Inc.	number@msg.gci.net
Globalstar (satellite)	number@msg.globalstarusa.com

Helio	<i>number@messaging.sprintpcs.com</i>
Illinois Valley Cellular	<i>number@ivctext.com</i>
Iridium (satellite)	<i>number@msg.iridium.com</i>
Iusacell	<i>number@rek2.com.mx</i>
i wireless	<i>number.iws@iwspcs.net</i>
Koodo Mobile (Canada)	<i>number@msg.koodomobile.com</i>
LMT (Latvia)	<i>number@sms.lmt.lv</i>
Meteor (Ireland)	<i>number@sms.mymeteor.ie</i>
Mero Mobile (Nepal)	<i>977number@sms.spicenepal.com</i>
MetroPCS	<i>number@mymetropcs.com</i>
Movicom (Argentina)	<i>number@sms.movistar.net.ar</i>
Mobitel (Sri Lanka)	<i>number@sms.mobitel.lk</i>
Movistar (Colombia)	<i>number@movistar.com.co</i>
MTN (South Africa)	<i>number@sms.co.za</i>
MTS (Canada)	<i>number@text.mtsmobility.com</i>
Nextel (United States)	<i>number@messaging.nextel.com</i>
Nextel (Argentina)	<i>TwoWay.11number@nextel.net.ar</i>
Orange Polska (Poland)	<i>9digit@orange.pl</i>
Personal (Argentina)	<i>number@alertas.personal.com.ar</i>
Plus GSM (Poland)	<i>+48number@text.plusgsm.pl</i>
President's Choice (Canada)	<i>number@txt.bell.ca</i>
Qwest	<i>number@qwestmp.com</i>
Rogers (Canada)	<i>number@pcs.rogers.com</i>
SL Interactive (Australia)	<i>number@slinteractive.com.au</i>
Sasktel (Canada)	<i>number@sms.sasktel.com</i>
Setar Mobile email (Aruba)	<i>297+number@mas.aw</i>
Suncom	<i>number@tms.suncom.com</i>
T-Mobile (Austria)	<i>number@sms.t-mobile.at</i>
T-Mobile (UK)	<i>number@t-mobile.uk.net</i>
Telus Mobility (Canada)	<i>number@msg.telus.com</i>
Thumb Cellular	<i>number@sms.thumbcellular.com</i>
Tigo (Formerly Ola)	<i>number@sms.tigo.com.co</i>
Tracfone (prepaid)	<i>number@mmst5.tracfone.com</i>
Unicel	<i>number@utext.com</i>
Virgin Mobile (Canada)	<i>number@vmobile.ca</i>
Vodacom (South Africa)	<i>number@voda.co.za</i>
Vodafone (Italy)	<i>number@sms.vodafone.it</i>
YCC	<i>number@sms.ycc.ru</i>
MobiPCS (Hawaii only)	<i>number@mobipcs.net</i>

Node-RED™ SOFTWARE LICENSE

Copyright (2018) (B+B SmartWorx)

Node-RED is licensed under the Apache License, Version 2.0 (the "License"),
You may not use Node-RED software preinstalled in the SmartSwarm Gateway except in compliance with the License. You may obtain a copy of the License at:

<http://www.apache.org/licenses/LICENSE-2.0>

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.

See the License for the specific language governing permissions and limitations under the License.

B+B SMARTWORX TECHNICAL SUPPORT

Phone: 1 (800) 346-3119
Monday - Friday, 7 a.m. to 5:30 p.m. CST

Fax: (815) 433-5109

Email: [B+B SmartWorx Technical Support](mailto:Technical_Support@bb.com)

Web: <http://www.advantech-bb.com>